



# Driveway Approach Detail Drawing

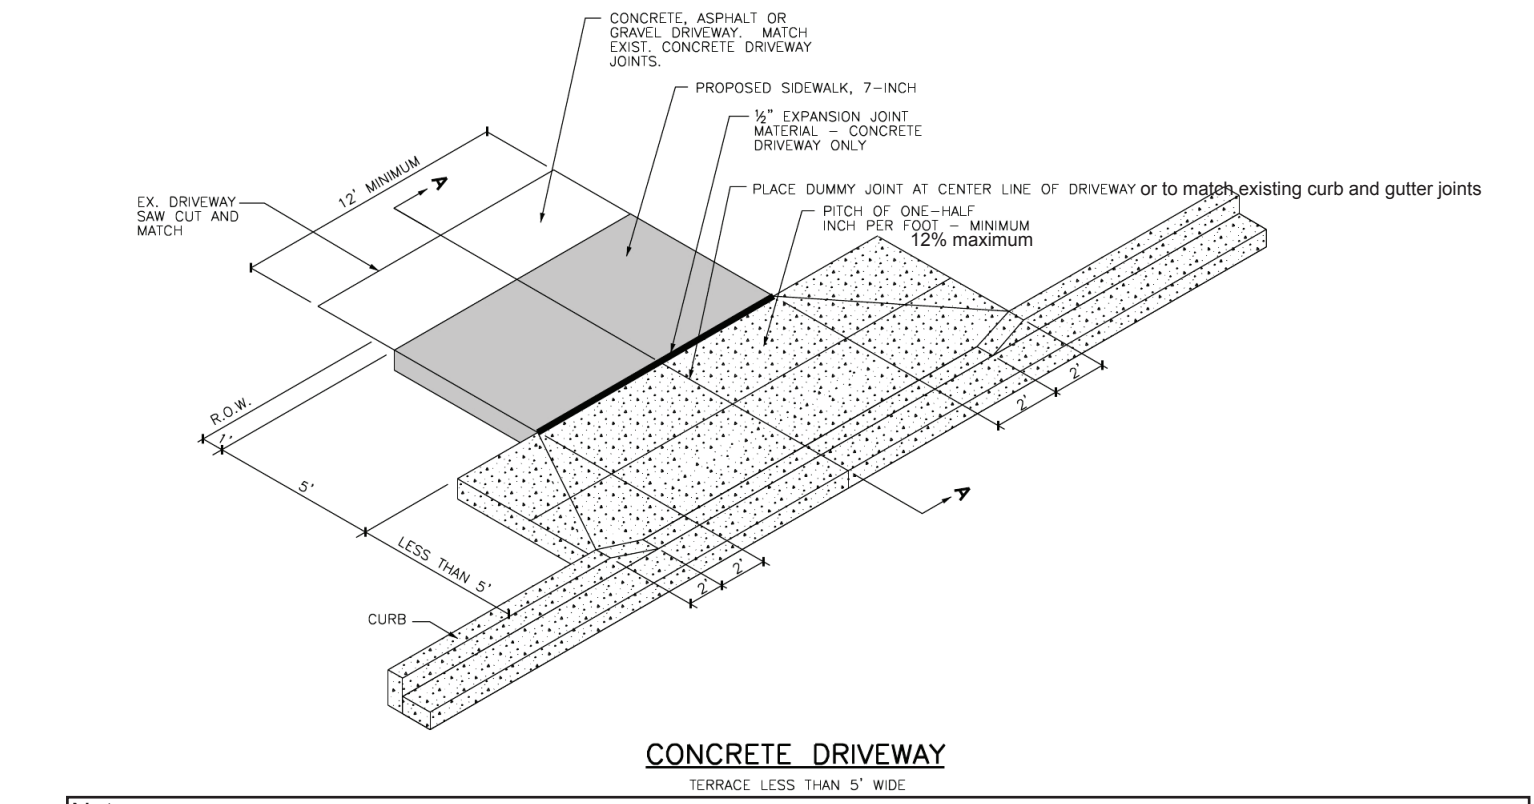

- Notes:**
- All poured concrete must be a minimum 6-bag, air-entrained Portland Cement mix design. The mix cannot contain any additives including, but not limited to: wire mesh, fiber mixes, fly ash, water reducers, etc.
  - Poured concrete must be sprayed with a white sealing/curing compound immediately after the concrete has "set" but before it is fully cured.
  - After September 1st, the curing compound must use a linseed oil base.
  - Full depth forms are required for inspection. No 2x4s allowed.
  - Date of pour must be stamped or neatly written into the finished surface.

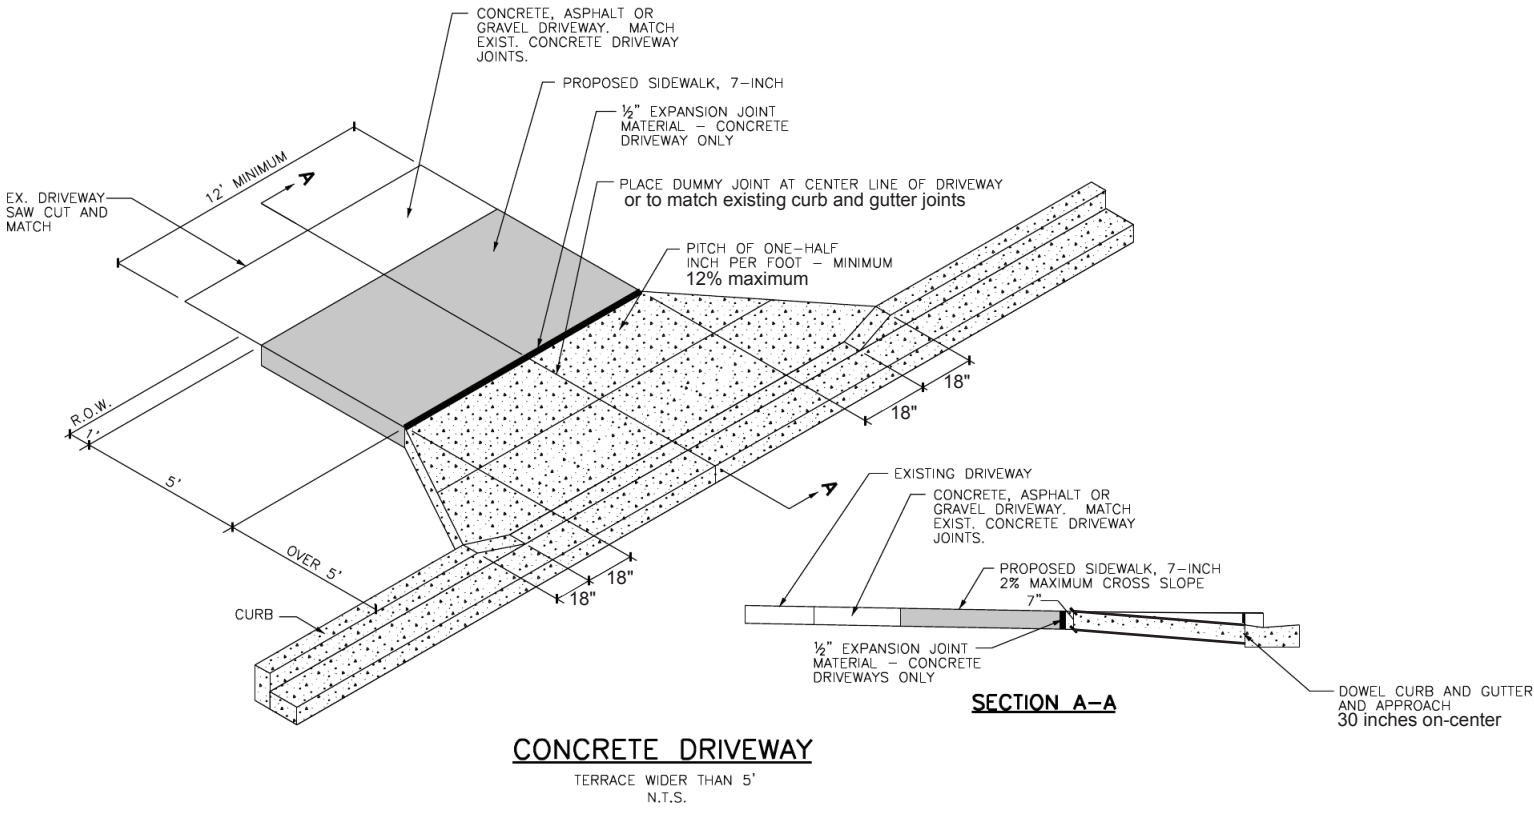